


RGBW-W-R6 Remote control instructions

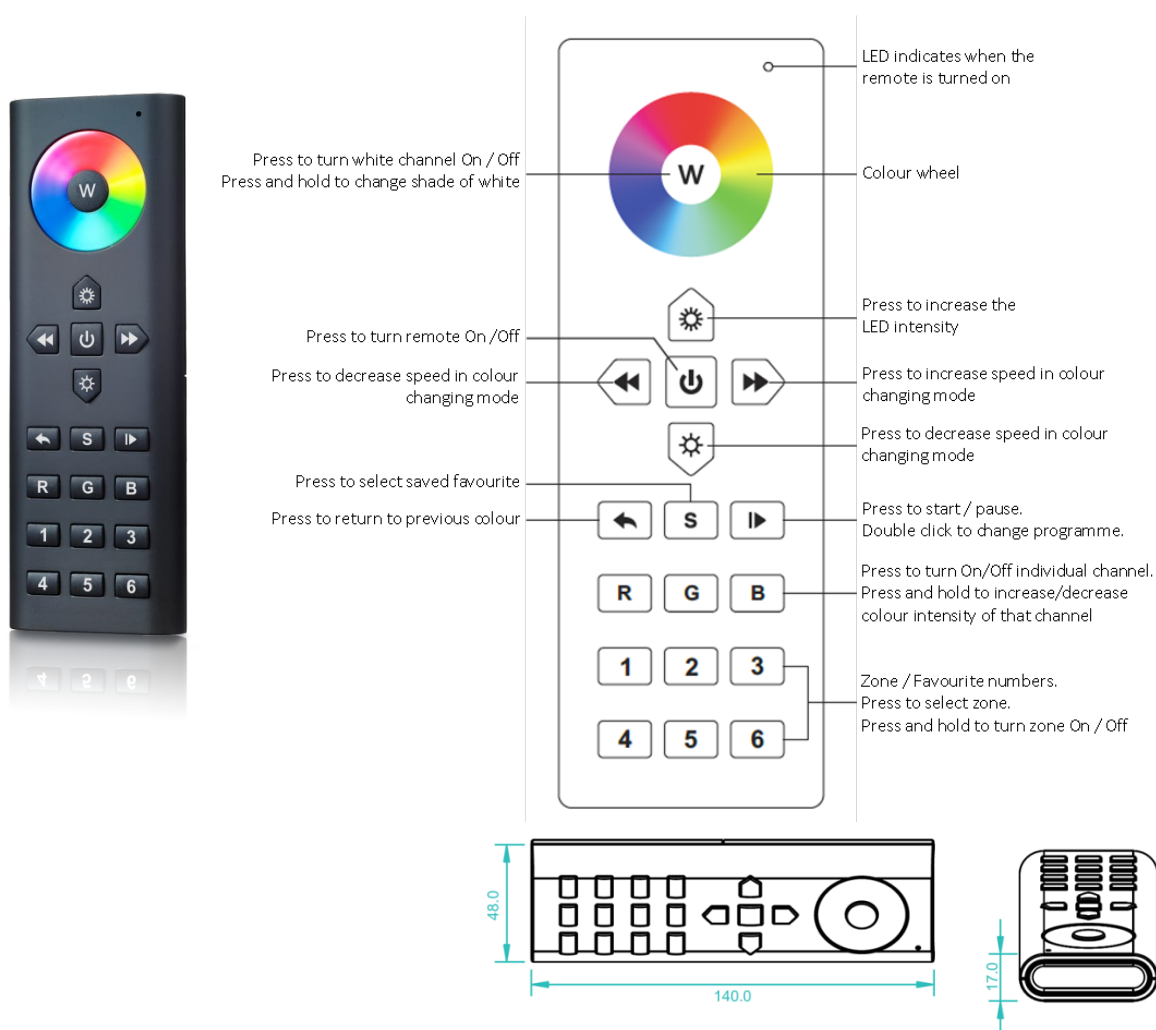

Pairing with the RGBW-W-RC receiver:

Turn on the RGBW-W-RC receiver to be paired, then turn on the RGBW-W-R6 remote and (Indicator on remote should be on).

Click the learning button on the RGBW-W-RC receiver (do not hold down), then click the zone button that it is to be paired with, then touch and slide your finger on the glass colour wheel on the remote. The LED products connected to the RGBW-W-RC LED receiver will flash quickly twice indicating that the RGBW-W-RC LED receiver is now paired with the remote.

Please note: you can only pair the RGBW-W-RC LED receiver with a maximum of 8 remotes,

To delete the pairing:

Turn on the RGBW-W-RC LED receiver and hold down the “Learning Key” button until the LED products that are connected to the unit flash, once this has been done the RGBW-W-RC LED receiver will revert back to the factory settings.

Please note: Once this has been done the RGBW-W-RC LED receiver will have deleted all remote pairings that were previously set with the unit.

Zone function:

With this remote you can operate up to 6 different zones with unlimited amount of RGBW-W-RC receivers within that zone.

The RGBW-W-RC receivers can be paired with multiple zones on the single remote, an example will be if 3 receivers were set to individual zones within a room, and you also wanted them to operate the same all at once, or to synchronise on colour changing programmes.

To do this repeat the pairing sequence again, one RGBW-W-RC LED receiver at a time, and save them all to the same spare zone. Each time you do this the led will flash twice to indicate a successful pairing.

Turn zones On/Off individually using the remote:

Once the zone/ zones have been set for the RGBW-W-RC receivers, this remote can turn each zone independently of the rest of the zones on/off simply by pressing and holding down the zone key you choose.

Please note:

The zone control information is stored in the remote.

When you are using more than one remote you can either set them up with the same way or assign different settings if you choose.

When using multiple zones simply click the button of the zone you wish to change then touch the glass colour wheel to change the colour, or any other function you wish to change.

Colour Changing selection:

Press the play button and press again to pause.

To change the programme, while the programme is playing double click the play button.

Favourite settings:

To save a to a favourite's button, you simply select the zone to be saved to, select colour or colour changing programme. Then press and hold the "S" button until the red indicator on the RGBW-W-R6 remote flashes blue, then press down and hold the number button you wish to assign it to, and after a couple of seconds the led will flash on the RGBW-W-RC receiver indicating a successful save. When you want to go back to the favourite make sure you are in the correct zone then press the "S" button then the number button of the saved "Favourite" to select.

To change a favourite, simply repeat the steps.

Please note: that the Favourites are saved in the RGBW-W-RC receiver and not the remotes, so when favourites are changed all remotes will be updated to the new favourite when they are connected.

White colour selection:

By clicking the "W" button you can select White. To change the colour tone of the White press and hold the "W" button and release when the desired colour is reached. To return to the RGB colours click the "W" button.

By pressing the "W" button in the centre of the colour the White LED will work in conjunction with the RGB LED's, then slide finger on the glass colour wheel this will intensify the brightness of the LED's (but limit the RGB colour range). By pressing the "W" button again you will turn off the white LED.