

## RGBW-W-S-5 Instructions

Open the battery cover on the remote and discard the plastic cover.

### Pairing with RGBW-W-RC receiver:

Turn on the RGBW-W-RC receiver to be paired, then turn on the RGBW-W-S-5 remote.  
Click the learning button on the RGBW-W-RC receiver (do not hold down), then on the remote quick press the dimmer on the zone you wish to connect to.

The LED products connected to the RGBW-W-RC LED receiver will flash once indicating that the RGBW-W-RC LED receiver is now paired with the remote.

*Please note: you can pair the RGBW-W-RC LED receiver with a maximum of 8 remotes.*

### To delete the pairing:

Turn on the RGBW-W-RC LED receiver and hold down the “Learning Key” button until the LED products that are connected to the unit flash, once this has been done the RGBW-W-RC LED receiver will revert to the factory settings.

*Please note: Once this has been done the RGBW-W-RC LED receiver will have deleted all remote pairings that were previously set with the unit.*

### Using the Remote:

Quick press the brightness button on the zone you wish to control to turn the zone on.  
Quick press the dimmer button on the zone you wish to control to turn the zone off.

Hold the brightness button to increase the brightness.  
Hold the dimmer button to decrease the brightness.



sales@sled.co.nz · sled.co.nz · 09 420 3160

**Innovative Lighting Solutions**

Disclaimer: While every care has been taken with the details of these products, Specialised LED Products Ltd accepts no responsibility for any inaccuracies. Specialised LED Products Ltd reserves the right to change the specifications without notice to continually ensure you receive a superior product.

