

SMART-RC-SINGLE Receiver installation instructions

Warnings:

Do not connect the power source until all other connections are made.

Do not expose the unit to moisture

Wiring:

Wire the light to the receiver according to the LED + and - lettering on the right of the receiver.

To connect this, push down on the lever at the back of the terminal, push the wire into the gap/hole until it makes contact, then release the lever to close the terminal.

Connect the input power from your transformer to the correct terminals as labelled on the receiver(DC IN).

Pairing to Phillips Hue:

1. Setup strip and Smart Home receiver, following the SMART-RC-SINGLE instructions.
Connect to power and turn on.
2. In Phillips Hue App
Settings (Bottom right)
Devices
Add Light (Top left)
Select Room
'No QR Code'
'Next'
'Lights and smart plugs'
'Next'
The lights connected to the receiver will flash twice to show successful pairing.
The new receiver will be added to the room.
(If no lights connect to the app please reset the receiver)

Fault finding:

Turn off power to the receiver.

If none of the lights are working, check that all wires are making contact with the receivers terminals (if not, strip wire cover back enough to ensure contact).

To reset SM-RC:

Pulse the power to the receivers **five** times. The lights will flash to show it has been reset.

sales@sled.co.nz · sled.co.nz · 09 420 3160

Innovative Lighting Solutions



Disclaimer: While every care has been taken with the details of these products, Specialised LED Products Ltd accepts no responsibility for any inaccuracies. Specialised LED Products Ltd reserves the right to change the specifications without notice to continually ensure you receive a superior product.