

SYN-RGBW-WM-B-4

Synergy Series - Single Colour, Four Zone Remote

Pairing to SYN-RC

Power on the SYN-RC receiver to be paired, then turn on the SYN-RGBW-WM-B-4 remote

(Indicator on remote should be on).

Click the Match Key on the SYN-RC receiver (do not hold down), Then press the Zone you wish to connect to on the remote three times.

The LED products connected to the SYN-RC LED receiver will flash quickly indicating that the SYN-RC LED receiver is now paired with the remote.



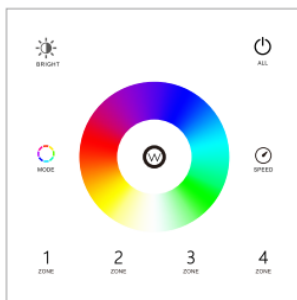
Deleting a Pairing







Hold down the Match Key on the SYN-RC receiver for 10 seconds.

Connected LED lights will revert back to a default bright white.

Operating Distance

30m in clear air.



-  — Turn on/off all zone light.
-  — Adjust brightness, 10 levels.
-  — Short press run next dynamic mode, long press 2s run mode-cycle.
For dynamic mode, adjust speed, short press 10 levels, long press 2s get the default speed.
For static RGB color, adjust saturation, short press 11 levels, long press 1-6s for continuous adjustment.
-  —
For RGB light, short press to get white (RGB mix).
For RGBW light, short press to get white (W channel), long press 1-6s adjust W brightness.
-  — Touch to change static RGB color.
-  — Short press turn on zone light and select zone simultaneously, long press 2s turn off zone light.
Short press multiple zone key fastly, will select multiple zone synchronously.
4 zone control separately or synchronously, each zone could control multiple receivers.

Disclaimer: While every care has been taken with the details of these products, Specialised LED Products Ltd accepts no responsibility for any inaccuracies. Specialised LED Products Ltd reserves the right to change the specifications without notice to continually ensure you receive a superior product.

innovative lighting solutions

www.sled.co.nz · sales@sled.co.nz · 09 420 3160

Specialised LED Products
Limited